

Technical Information				
Subject	Intel USB 3.0 eXtensible Host Controller Driver - SpeechMike does not respond			
Hardware	SpeechMike III / Premium			
Published	15 November 2016			
Last Review	16 November 2016			

There are reports from the market related to following observation:

SpeechMike does not respond anymore

Reason:

This issue is related to a bug of the INTEL USB 3.0 extensible Host Controller Driver which has been resolved recently with revision 4.0.6.60.



Closed Issues

3 Closed Issues

Description	Resolution
USB port may not enter into suspend state after the system has transitioned to S3 if a specific USB devices is connected to that USB port.	Resolved in Release Rev: 4.0.6.60
Dropped of frames may occurs on a specific USB3.0 camera when using larger buffer size for data transfer.	Resolved in Release Rev: 4.0.6.60
xHCI controller driver may incorrectly suspend the wrong interface on a USB device.	Resolved in Release Rev: 4.0.6.60
A USB device connected behind a hub may take long time to get removed from the OS if the hub is unplugged from the USB port.	Resolved in Release Rev: 4.0.6.60
USB headset may freeze when using a Voice over IP application	Resolved in Release Rev: 4.0.6.60
BOSD 0x9F may occurs during warm boot stress test	Resolved in Release Rev: 4.0.6.60
USB network device with non-continuous interface numbering may fails to connect to internet after idle for few minutes	Resolved in Release Rev: 4.0.6.60



Internal findings

This issue is related to Windows 7 only. There are no reports on system running on Windows 10.

- The issue is independently of the Audio Input Device, as long as it is connected to USB 2.0 or USB 3.0 (driver is also active on USB 2 ports)
- SPS products are also concerned as issue this is related to the used audio driver e.g. SpeechExec Pro or Enterprise Software as well as SoftwareSDK Integration.
- We have also reports from other manufacturer of audio software, e.g. SpeechMagic.

Known countermeasures which will minimize/ resolved the issue

- Deactivation of various energy saving options in the BIOS or USB Power Management see <u>Attachment B</u>
- In case of desktop PC using an extra PCI USB card could solve the issue as well.
- Increase the minimum processor state to >= 50 see Attachment C

New solutions (based on Intel)

- Intel Workaround in the registry see <u>Attachment A</u>. We got mixed impressions on the proposed workarounds as on some PC's it was successful on others not. Matter of fact is that Intel will not investigate any longer on Windows 7 issues
- Latest Intel Drivers
 For following chipsets we strongly recommended to update the drivers to the latest version <u>4.0.6.60</u>. The driver upgrade did in 100% of all the cases resolve the reported issue

The Intel® USB 3.0 extensible Host Controller Driver contains support for the following Intel Chipsets:

- Intel® 8 Series/C220 Chipset Family
- 4th Generation Intel® Core[™] Processors
- Intel® C610 series Chipset Family
- Intel® 9 Series Chipset Family
- Intel® Pentium® Processor or Intel® Celeron® Processor N- & J- Series
- 5th Generation Intel® Core[™] Processors
- Intel® Core™ M Processor
- 6th Generation Intel® Core[™] Processors
- Intel® 100 Series Chipset Family

The following Operating Systems are supported based on chipset:

Windows* 7 Operating System (both 32-bit and 64-bit versions).

- Intel® 8 Series Chipset Family
- 4th Generation Intel® Core™ Processors
- Intel® 9 Series Chipset Family
- Intel® Pentium® Processor or Intel® Celeron® Processor N- & J- Series
- 5th Generation Intel® Core[™] Processors
- Intel® Core™ M Processor
- 6th Generation Intel® Core[™] Processors
- Intel® 100 Series Chipset Family

Windows* 7 Operating System (both 32-bit and 64-bit versions). Windows* Server 2008 R2 Operating System. Windows* Small Business Server 2008 Operating System.

- Intel® C220 series chipset family
- Intel® C230 series chipset family
- Intel® C610 series Chipset Family

Note:

The Intel® USB 3.0 eXtensible Host Controller Driver is not supported on Windows* XP and Windows Vista*.



For PC's using Chipset C216 there is no driver update available from Intel therefore we recommend the improvements based on known countermeasures as well as to implement Intel workaround in the registry – see <u>Attachment A</u>



Attachment A – Workaround registry.

WARNING:

Incorrectly editing the registry may severely damage your system. Before making changes to the registry, you should back up any valued data on your computer and exporting the registry as full backup.

Find DeviceInstancePath for the xHCI (extensible Host Controller Interface)

Select the USB 3.0 Host Controller, select Details and open from Property Device Instance Path.

🚔 Device Manager	
File Action View Help	
🗢 🔿 📅 🔛 🖬 🖬 🔯 🕼 🖏	
Image: Second	Renesas Electronics USB 3.0 Host Controller Properties General Driver Details Resources Renesas Electronics USB 3.0 Host Controller Property Device Instance Path Yalue PCI-VEN_1033&DEV_0194&SUBSYS_10191043&REV_03>FFFFFFFFFF
USB Root Hub	OK Cancel

Go to: Computer\HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Enum\PCI\ and search for the Device. Select Device Parameters and add new DWORD with Name InterruptersDefaultInterval and Value 7D0



📸 Registry Editor						
File Edit View Favorites Help						
De IDE	*	Name	Туре	Data		
NUSB3 PCI VEN_1033&DEV_0194&SUBSYS_10191043&REV_03 VEN_1033&DEV_0194&SUBSYS_10191043&REV_03 Control Device Parameters Interrupt Management		क्षे (Default) २३ FailReason २३ InterruptersDefaultInterval	REG_SZ REG_DWORD REG_DWORD	(value not set) 0x00000000 (0) 0x000007d0 (2000)		



Attachment B – Deactivate USB Power Management.

Click on Start and type **power options** in the Start Search box and then click Power Options in the Programs list.

\wp See more results	Control Panel (5)
power option × Shut down >	Power Options
	Change what the power buttons do
(3) 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	🖳 Windows Mobility Center

If you are prompted for an administrator password or confirmation, type your password or click on Continue.

Under the selected power plan, click on Change plan settings.

		×
Control Panel >	Hardware and Sound > Power Options - 47 Search Control Panel	٩
<u>File Edit V</u> iew <u>T</u> ools <u>H</u> elp		
Control Panel Home	Select a power plan	0
Require a password on wakeup Choose what the power buttons do	Power plans can help you maximize your computer's performance or conserve energy. Make a plan active by selecting it, or choose a plan and customize it by changing its power settings. <u>Tell me more about power plans</u>	
Choose what closing the lid does	Plans shown on the battery meter ③ Balanced (recommended) Change plan settings	1
Create a power plan	Automatically balances performance with energy consumption on capable bardware	41
Choose when to turn off the display	Power saver Change plan settings	
Change when the computer sleeps	Saves energy by reducing your computer's performance where possible.	
	Hide additional plans	\sim
See also	High performance Change plan settings Favors performance, but may use more energy.	
Personalization		
Windows Mobility Center		
User Accounts	Screen brightness: 🧿 🚽 🗍 🔆	

Click Change advanced power settings.

					×
Control Panel > Hardw	are and Sound 🔸 Pow	er Options 🔸 Edit Plan Se	ttings 👻 🔸	Search Control Panel	Q
<u>File Edit View Tools Help</u>					
					~
Change settings for t	ne plan: Balanced				
Choose the sleep and displa	y settings that you wan	t your computer to use.			
	🚺 On b	oattery 🚿	Plugged in		
O Dim the display:	2 minutes	▼ 5 minutes	•		
🔛 Turn off the display:	5 minutes	▼ Never	•		E
Put the computer to sle	ep: 15 minutes	▼ Never	•		
🔆 Adjust plan brightness:	•	— × •	×		
	_				
Change advanced power set	tings				
<u>R</u> estore default settings for t	his plan				Ŧ

In the Power Options dialog, click on USB settings, and then expand USB selective suspend setting. Click and select Disabled both options.





COO V A Control Panel > V V Search Control Panel	Control Panel + Hardware and Sound + + + Search Control Panel >
Eile Edit View Iools Help	<u>File Edit View Iools H</u> elp
Adjust your computer's settings View by: Categor • Image: Computer is settings System and Security Image: Computer is settings Networks and Internet Image: Computer is settings Networks and Internet Image: Computer is settings Networks and printers Add action: Computer is a projector Networks and printers Add action: Computer is a projector Networks and printers Add action: Computer is a projector System and Security Image: Computer i	Control Panel Home System and Security Network and Internet Adda decice Adda decice Adda decice Hardware and Sound Programs Sound Angree defaults settings for media or decices Play CDs or other media automatically User Accounts Agene defaults settings for media or decices Play CDs or other media automatically Octock, Language, and Region Sound Agust system volume Change system sounds Manage audio decices Personalization Clock, Language, and Region Sound Agust system volume Change when the power buttors do Regive a passowie when the computer wakes Change when the computer sleeps Agust scene brightness Sound Sipplay Display Sound Network wakes Change when the computer sleeps Agust scene brightness Sound Sipplay Sipplay Sipplay Sipplay Windows Mobility Center Agust commonly used mobility settings Adjust settings Adjust settings Adjust settings Adjust settings before giving a presentation Sipplay Windows Mobility Center Adjust settings Adjust settings Adjust settings Adjust settings Realtek HD Audio Manager Sipplay Sipplay

Open Control Panel and click on Hardware and Sound. Click on Device Manager

Scroll down to Universal Serial Bus controllers and click with the right Mouse button on USB HUB and select Properties. DEACTIVATE the option Allow the computer to turn off this device to save power and click OK

🚔 Device Manager		
File Action View Help		
(+ +) = [] [] = [A] [] (A] [] (A]	<u>د</u>	
Dick dives Dicplay adapters Dicplay ad	yer Software rdware changes et Controller - 3834 et Controller - 383C	E
USB Root Hub		-
Opens property sheet for the current selection.		

Generic U	5B Hub F	roperties					×
General	Power	Advanced	Driver	Details	Power	Managemen	t
đ	Generic	USB Hub					
Allow	v the com	puter to tur	n off this d	levice to	save po	wer	
					0	к 📄 📃	Cancel



Attachment C - Minimum Processor State

Click on Start and type **power options** in the Start Search box and then click Power Options in the Programs list.

arphi See more results	Control Panel (5)
power option × Shut down +	Power Options
0	🦃 Change what the power buttons do
🔁 o 🗢 o 🐂 🖬 🖾 🛤	Windows Mobility Center

If you are prompted for an administrator password or confirmation, type your password or click on Continue.

Under the selected power plan, click on Change plan settings.

			×
Control Panel >	Hardware and Sound > Power Options - 47	Search Control Panel	٩
<u>File E</u> dit <u>V</u> iew <u>T</u> ools <u>H</u> elp			
Control Panel Home	Select a power plan		0
Require a password on wakeup Choose what the power buttons do	Power plans can help you maximize your computer's performance or conserv active by selecting it, or choose a plan and customize it by changing its powe <u>about power plans</u>	e energy. Make a plan r settings. <u>Tell me more</u>	
Choose what closing the lid does	Plans shown on the battery meter Balanced (recommended)	Change plan settings	ור
Create a power plan	Automatically balances performance with energy consumption on cap	ble bardware	- 1
Choose when to turn off the display	Power saver	Change plan settings	
Change when the computer sleeps	saves energy by reducing your computer's performance where possible	2	
	Hide additional plans		
	High performance	Change plan settings	
See also	Favors performance, but may use more energy.		
Personalization			
Windows Mobility Center			
User Accounts	Screen brightness: 🧿 👘 🙀	£	

Click Change advanced power settings.

										×
	0,-	۰ 🥩	Control Panel + Hardware a	nd Sound 🔸	Power Options	► Edit Plan S	Settings	- - ↓ + + + + + + + + + +	Search Control Panel	Q
File	Edit	View	Tools Help							
Tue	Taur	Tren	Toop Web							*
Change settings for the plan: Balanced										
	Choose the sleep and display settings that you want your computer to use.									
				4						
					On battery	40	* Plugged in			
		•	Dim the disular	2		E	-	_		
			Dim the display:	2 minutes		5 minute	s	•		
		D	Turn off the display:	5 minutes		Never		•		E
		۲	Put the computer to sleep:	15 minute	s •	Never		-		
) (Adjust plan brightness:	•	3	× •	1	<u>.</u>		
		Ch	ange advanced power settings							
		Re	store default settings for this p	lan						
										-

In the Processor power management dialog, select Minimum processor state, and then set the value to 50% Click Apply and OK to close the window.





November, 2016 Doc. No: PRI-1114/2016

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by Speech Processing Solutions GmbH under license from Koninklijke Philips N.V.

All other trademarks are the property of their respective owners.

Errors and omissions excepted.

Speech Processing Solutions GmbH reserves the right to change programs or the documentation from time to time without informing the user

© 2016 by Speech Processing Solutions GmbH.

All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of Company Name.